

# User Manual

**For your safety – read this user guide carefully to ensure proper use of the product and to avoid any danger of physical damage**

- Be cautious while using your MP4 player to avoid explosion, fire, electric shock, etc.
- When using your player, pay attention to your health, especially the hearing power.
- Do not leave the player in a place subject to moisture or temperature higher than 35°C or 5°C.
- Do not use earphones while driving or riding a bicycle.
- Do not repair device by yourself, or it will cause damage.
- Using earphones while walking may cause traffic accident.
- Avoid getting the player wet or dropped in water.
- Do not turn up the volume too high as doctors warn against prolonged exposure to high volume.
- Stop using the device or turn down the volume if you encounter problems on your hearing.
- Please backup important data onto your computer to avoid data loss.
- Always use the accessories provided by or approved by our company.

**Note**

Please recharge the digital player before using it!

**Key features**

Support Bluetooth function (by connecting it to Bluetooth speakers and headphones)


MP3/WMA/WAV /APE/FLAC etc. format supported.

Support USB 2.0 capability

Support voice recording function.

Support FM Radio

## Nomenclature

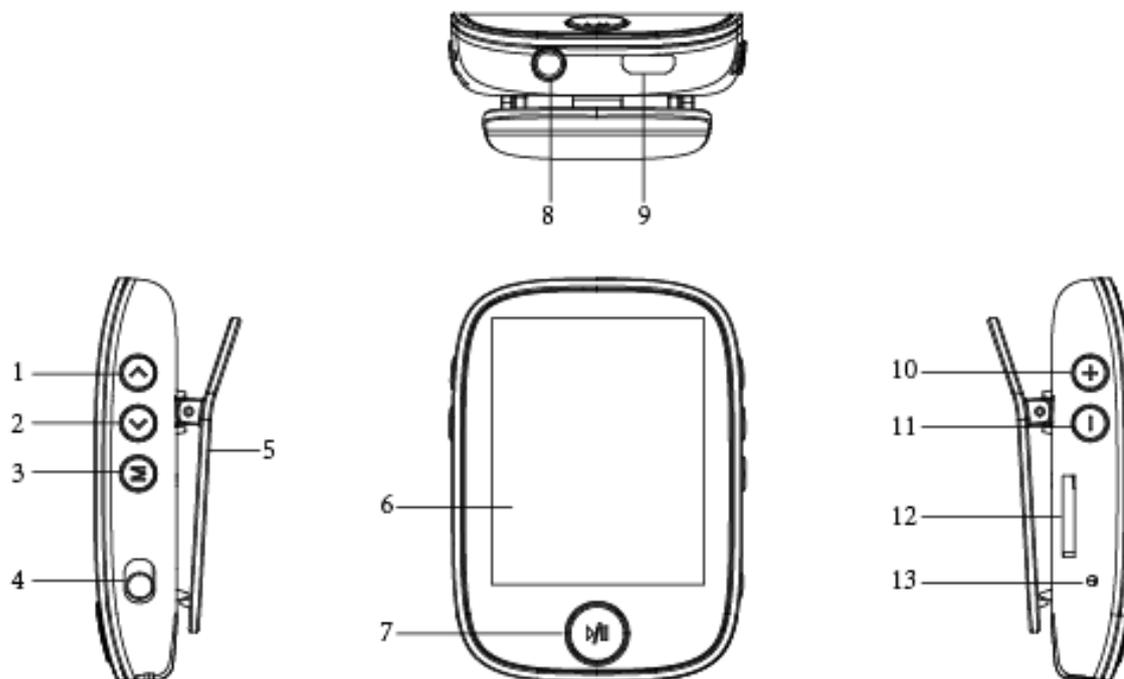

1、 Backward 2、 Forward 3、 MENU 4、 Power on/off 5、 Clip 6、 LCD display 7、 Play/ Pause 8、 Earphone jack 9、 USB port 10、 VOL+ 11、 VOL- 12、 Micro SD slot 13.MIC

## Charging battery safely

1. Connect to device's USB port with the provided USB cable.
2. Battery icon will blink while charging and once full, it will stop blinking.
3. If device is full charged, disconnect the USB cable.

### Note

- Before using it for the first time, please charge device.
- Do not overcharge device, or it may shorten the battery's life.
- Battery life shortens after long time usage
- The Li-polymer battery is consumptive material, so even if device is tuned off for prolonged it needs to be charged periodically.

### CAUTION

Do not disassemble, crush, short-circuit or incinerate your battery as it may cause fire, injury, burns, or other hazards

## Basic operations

### Turn on device

When Main Power Switch is turned off, slide button to turn on device

When Main Power Switch is turned on, long press [Play/Pause] to turn on device.

### **Turn off device**

When device is turned on, long press [Play/Pause] to turn off device.

If device functions abnormally, slide Main Power Switch button to forcefully turn off device.

Due to possible data loss, it is recommended to turn off device by long pressing [Play/Pause] button.

### **Note**

In case device is not being used for long time, Charge once a month.

### **Key function**

[Backward/Forward]: Press to move up/down

[VOL+ / VOL-]: Short press to adjust volume and long press to quick adjustment.

[M]: Press enter the pop-up menu and press again to return to the previous menu . Long press to return to main menu.

[Play/Pause]: Press to play or pause.

[Power]: Slide button to turn on /off device power supply.

### **Adding/Removing files/Folders**

- use device as a removable USB storage

1. Connect device to computer using provided USB cable.
2. Select "NO NAME" and Add files/folders into it by dragging or copying and pasting them.
3. Delete files from the removable USB storage (use the "Delete" command).

### **Disconnecting device from PC**

-Follow the steps to avoid damaging device or losing data.

1. Left click mouse on the icon that is on the taskbar at the bottom right corner of the desktop.
2. Click "Safely remove USB Mass storage Device".
3. Disconnect the player from your computer.

### **CAUTION**

1. Do not disconnect device while files are being transferred.
2. Do not press [M/Play] key while transferring files, or it can cause data loss or damage to the device

### **Connecting to Bluetooth speaker/Headphone**

This device can connect to Bluetooth speaker and headphone that supports A2DP, AVRCP profiles.

#### **Turn on/off Bluetooth**

Select "BT" on main menu. Press [Play/Pause] to enter,

Select "BT Control" and press [Play/Pause].

Press [Backward/Forward] to select "Turn BT on" or "Turn BT off" and press [Play/Pause] to turn on or off.

#### **Pairing device**

Set "Pairing mode" of Bluetooth speaker or headphone.

Go to "Search Device" and press [Play/Pause] to show "Searching..." message. Wait until

this message disappears.(Time for searching device depends on number of devices nearby and it can take up to 1~3 minutes depending on the environment).

#### **Note**

Refer to user's manual of Speaker or headphone for pairing modes.

#### **Connecting/Disconnecting/Unpairing device**

Go to "Device's list" and press [Play/Pause] to see list of devices.

Select desired device and press [Play/Pause] to show pop-up menu.

Bluetooth Devices Connected : select "Connect" and press [Play/Pause] to connect.

Disconnecting device : select connected device and press [Play/Pause] to show pop-up menu and select "Disconnect" to disconnect.

Bluetooth Devices Unpairing : select "Unpairing" and press [Play/Pause] to unpair.

#### **Note**

If device is not shown on "Device list" then go back and follow the steps from "Pairing device".

### **Bluetooth music player**

Select "All Music" on Bluetooth menu and press [Play/Pause] to play.

When using Bluetooth to play music, press [M] to show pop-up menu shown below.

Off: Close the EQ mode

Rock: Rock mode of EQ mode;

Funk :Funk mode of EQ mode

Hip hop: Hip hop mode of EQ mode

Jazz: Jazz mode of EQ mode

Classical: Classical mode of EQ mode

Techno: Techno mode of EQ mode

Custom: Custom mode of EQ mode

Long press [M] to come back Bluetooth menu, and press [M] again to show pop-up Exit Bluetooth selection menu. Press [Forward/Backward] to Select whether to exit Bluetooth interface

### **Music**

Select "Music" on main menu and press [Play/Pause] to enter submenu and press [Forward/Backward]to select your desired mode. and press [Play/Pause] to select

**All songs** : show all music from internal memory

**Artist** : show music sorted by artist

**Albums** : show music sorted by album

**Genres** : show music sorted by genre

**Playlists** : show Playlists

**Album art**:show Album art

**Audiobooks**:show audiobooks

**Create Playlist** : Create Playlist

**Card folder: Files in card** (Appear when TF card insert)

Press [Forward/Backward] to select music files and press [Play/Pause] to play and pause.

## Video

In order to play video files on this device, you must convert the video files to AMV/AVI format. Select “Video” on main menu and press [Play/Pause] to show pop-up menu shown below.

**Card folder:** Video files in card

Press [Forward/Backward] to select the video file you want to play and press [Play/Pause] to enter.

### Video playing

**Play/Pause video** : Press [Play/Pause] to play video and press it again to pause.

**Play next/previous video** : Press [Forward/Backward] to play next/previous video.

**FF/RW video** : While video is playing, Press and hold [Forward/Backward] to fast forward or rewind video.

When playing video, press [M] to show pop-up menu shown below.

Brightness: Video brightness adjustment.

Repeat: Video cycle mode selection.

Delete: Delete the current video file.

Create playlist: Update playlist.

### Note

When the SD card is not inserted, the machine will display the memory file directly without displaying the selection menu above.

## Radio

Select “Radio” on main menu and press [Play/Pause] to enter

### Select FM Station

**Previous/Next station** : Press [Forward/Backward] to adjust FM station.

### Setting

On FM radio mode, press [M] to enter pop-up menu and adjust device’s function according to user’s preference.

### Note

Always plug earphone when listening to FM Radio because earphone wire acts as antenna.

## Picture

Select “Picture” on main menu and press [Play/Pause] to show pop-up menu shown below.

**Card folder:** pictures files in card

Press [Play/Pause] to enter and press [Forward/Backward] to select the photo file you want to play.

### Photo viewing

**View next/previous photo** : On viewing photo, [Forward/Backward] to view next/previous photo

On viewing photo, press [M] to enter pop-up menu and adjust device's function according to user's preference.

#### **Note**

When the SD card is not inserted, the machine will display the memory file directly without displaying the selection menu above.

#### **Recorder**

Select "Recordings" on main menu and press [PLAY] to show pop-up menu

Start voice recording: Start recording.

Recordings library: Saved recording file

**Storage:** Select the storage location for the recording file

Record Format: Select a recording file format

Record Settings: Detailed recording settings

**Start/pause recording** : Press [PLAY] to start recording and press it again to pause.

**Save recording file** : while recording, long-press [M] to save file.

#### **EBook**

Select "EBook" on main menu and press [PLAY] to enter

**EBook viewing:** On viewing e-book, [Forward/Backward] to flick through

In e-book browsing mode, press [M] to enter pop-up menu.

#### **Pedometer**

Select "Pedometer" on main menu and press [PLAY] to enter

Press the [PLAY] button to start or pause the pedometer working state

#### **Set**

Select "Set" on main menu and press [M] to enter.

Play mode: Music playback settings, Repeat mode, shuffle mode

Sound settings: Equalizer, Volume limit, Key tone

Sleep timer: Sleep timer settings

Display settings: Brightness, Backlight timer, Screensaver

Date and time: Date and time settings

Slideshow settings: Time per slide, Repeat, Shuffle

Language: Select menu language

Information: System information, Disk space, File type supported (Music, Pictures, Video)

Format device: Delete all data inside internal storage

Factory settings: Restore factory settings

## Specification

Display	1.8" (128x160pixel)
Micro SD	up to 128GB
USB interface	USB2.0
Bluetooth	Support Bluetooth speaker, stereo headset
	Pairing, remember paired device
	Profile : A2DP, AVRCP
Power	5V 500mA
Dimension	60x43x11.5mm
Weight	25g

## Note

Due to software upgrade, There may be alteration in the content of this manual. There will be no separate notice in the case of any changes in the performance and functions of this product. If some sets and procedure are not identical, please take the real unit as standard.